
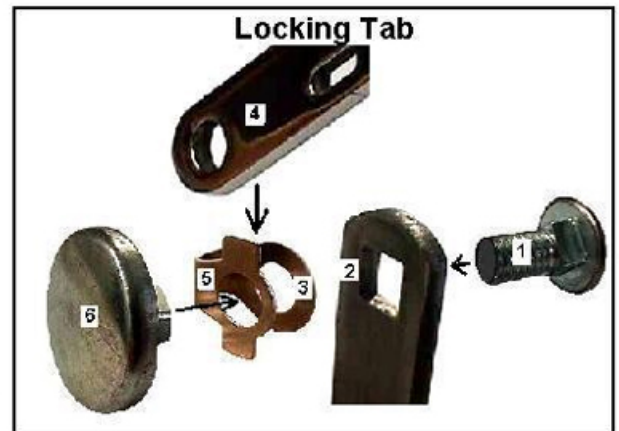


Top Assembly Installation

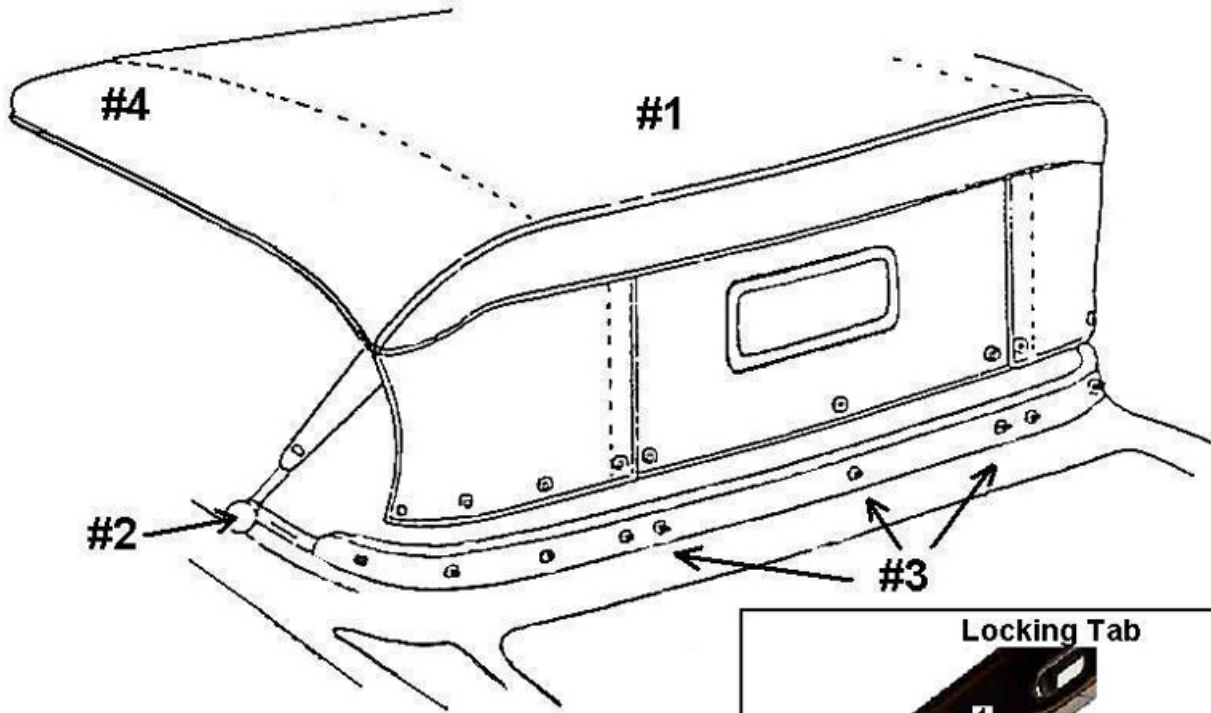

#1 Un-fold the top assembly.


#2 Secure the top to the pivot brackets on the side of the car. For cars that use them, install the locking tab when mounting the top.

#3 Do not secure the front of the top to the stanchions at this time. Install the fasteners in the tack rail first. Pull the top back and install the fasteners. Start from the center and work towards the outside of the car.

#4 Leave the top snapped in the back and pull the top down in the front. Tighten the thumb screws.

#5 Snap the windshield flap to the top, front of the windshield. The tube on the inside of the windshield flap rests on top of the windshield to act as a weather flap.

30-31 Deluxe Roadster Only

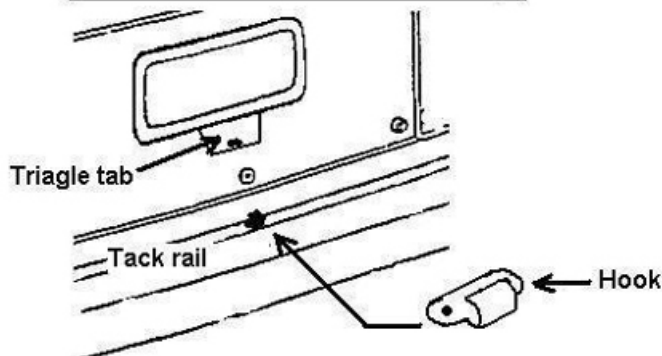

On 30-31 Deluxe roadster tops, there is a triangle tab under the rear window. Install the hook on the top of the tack rail in the center. The tab hooks to the hook on the tack rail when the top is folded down to help hold the window frame.